
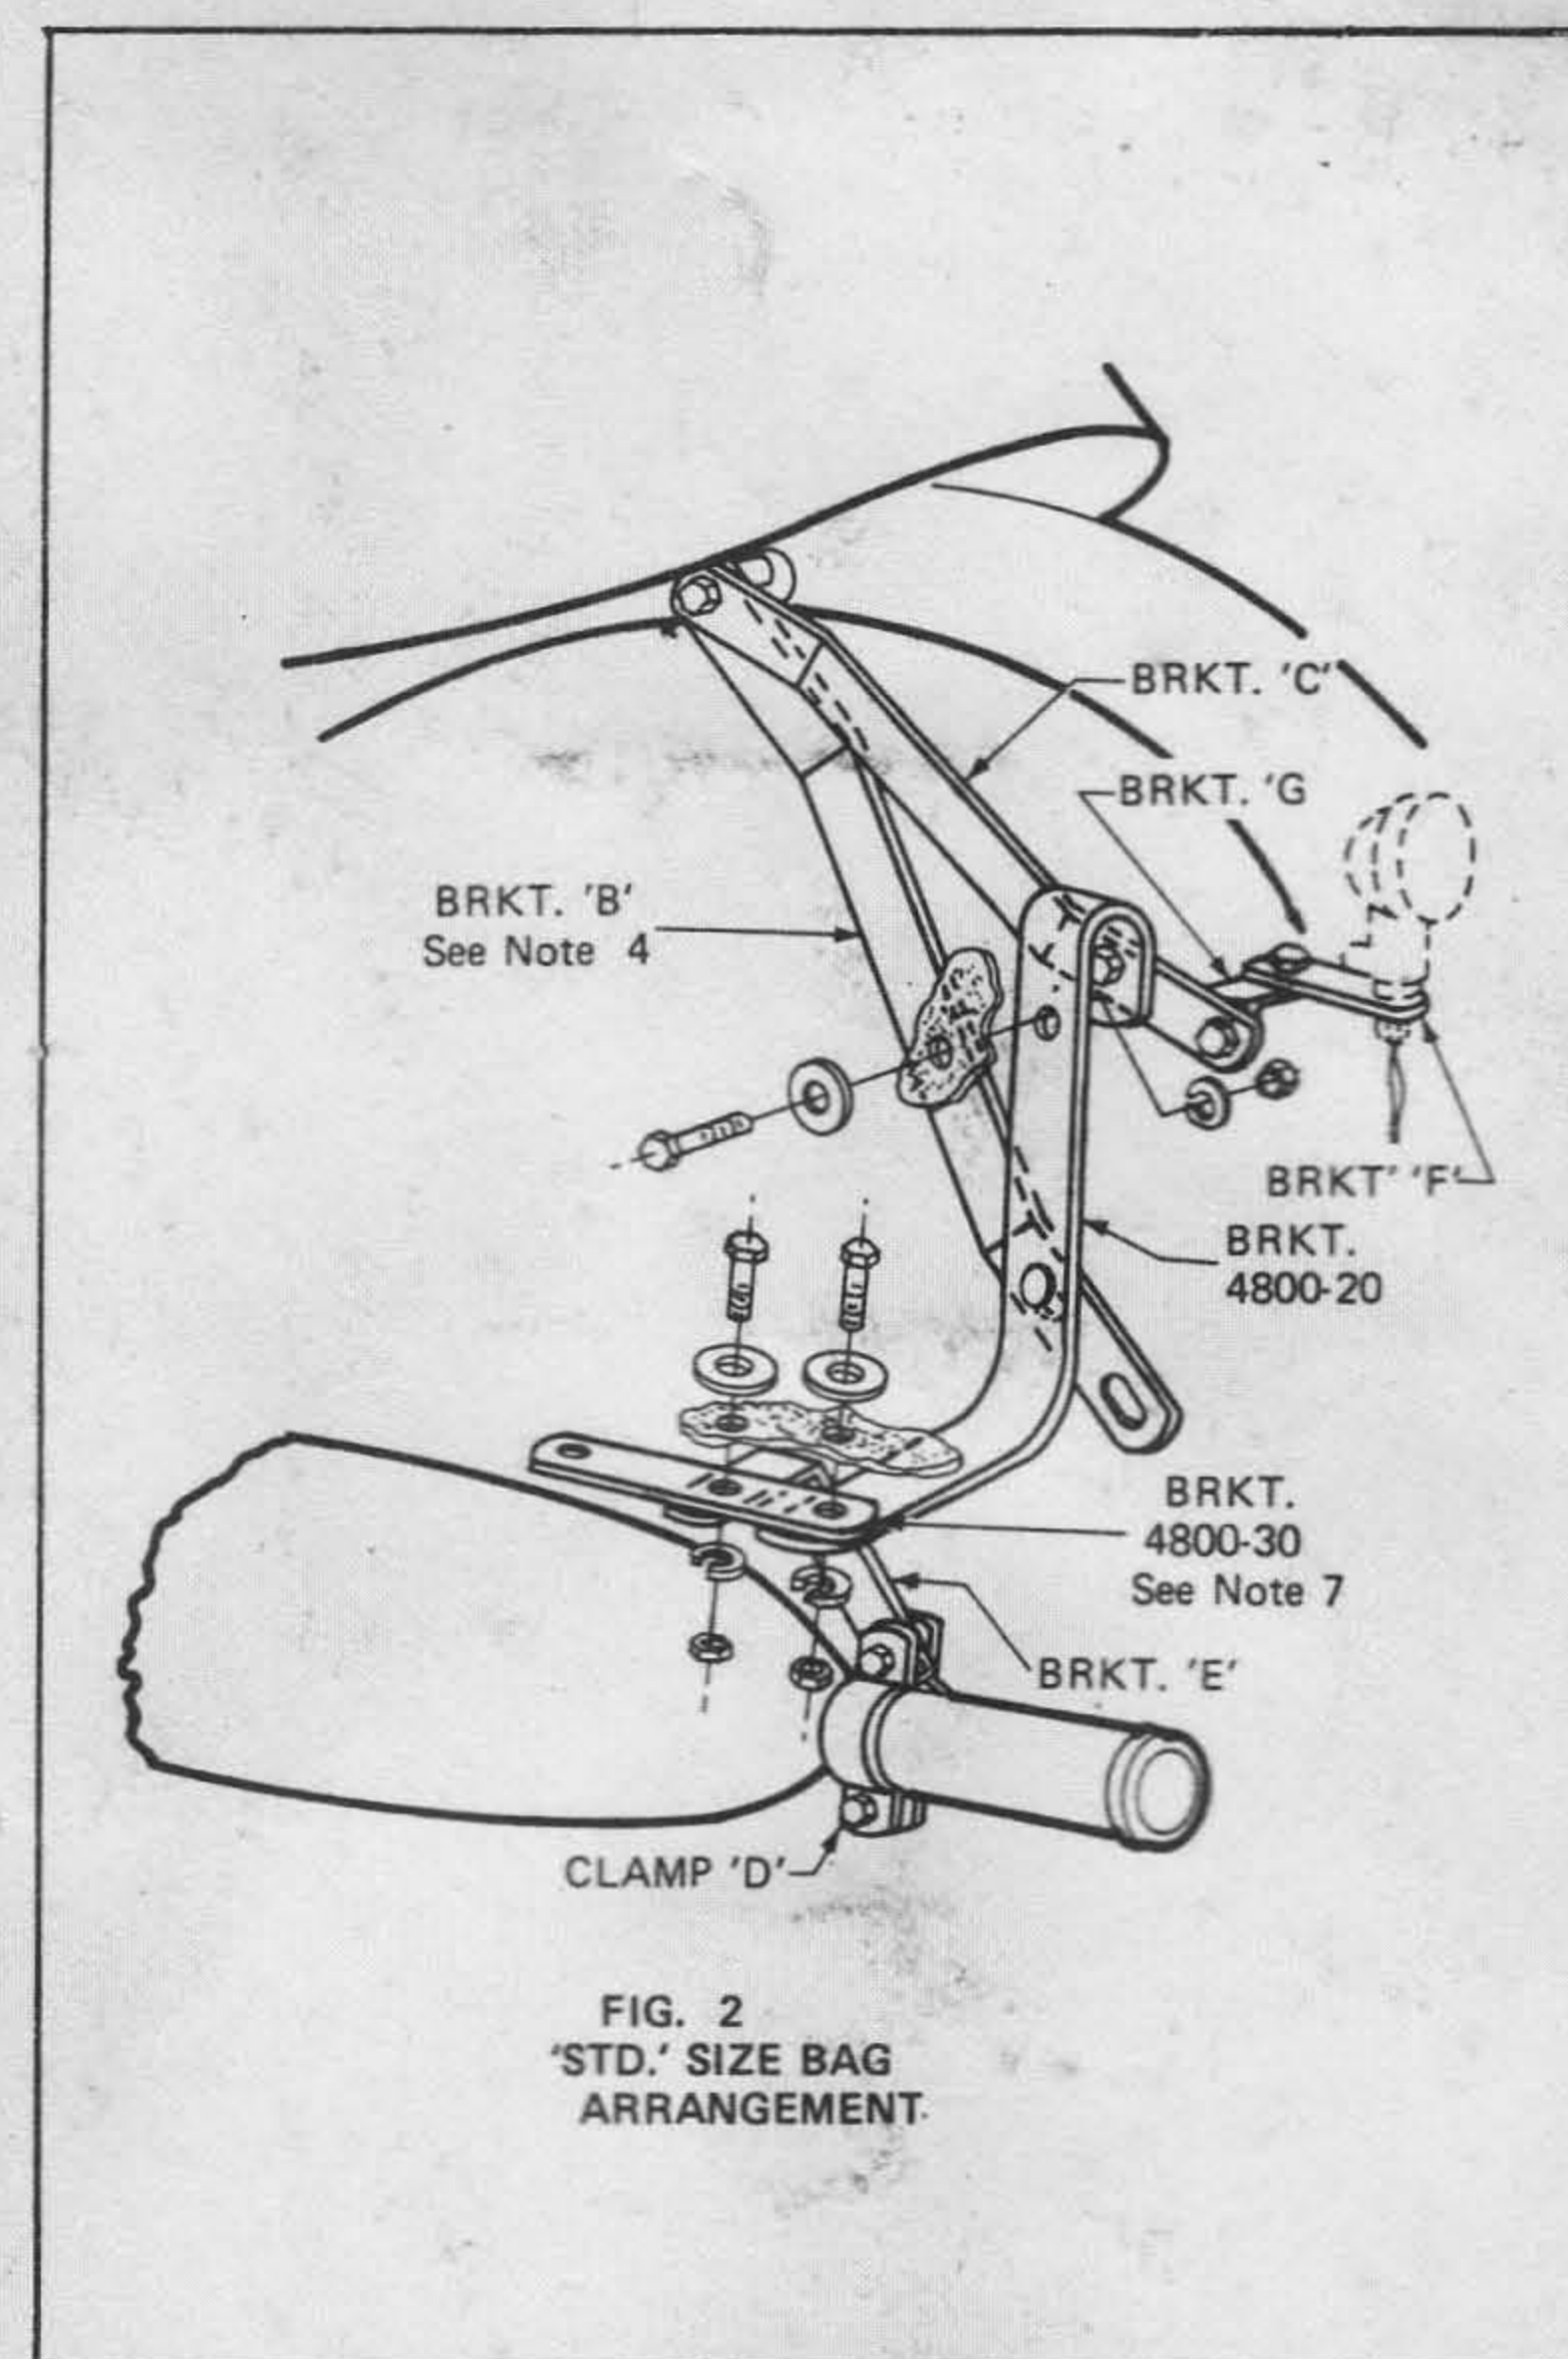


SADDLEBAG MOUNTING INSTRUCTIONS

KIT 4867 - HONDA GL-1000 (GOLD WING)

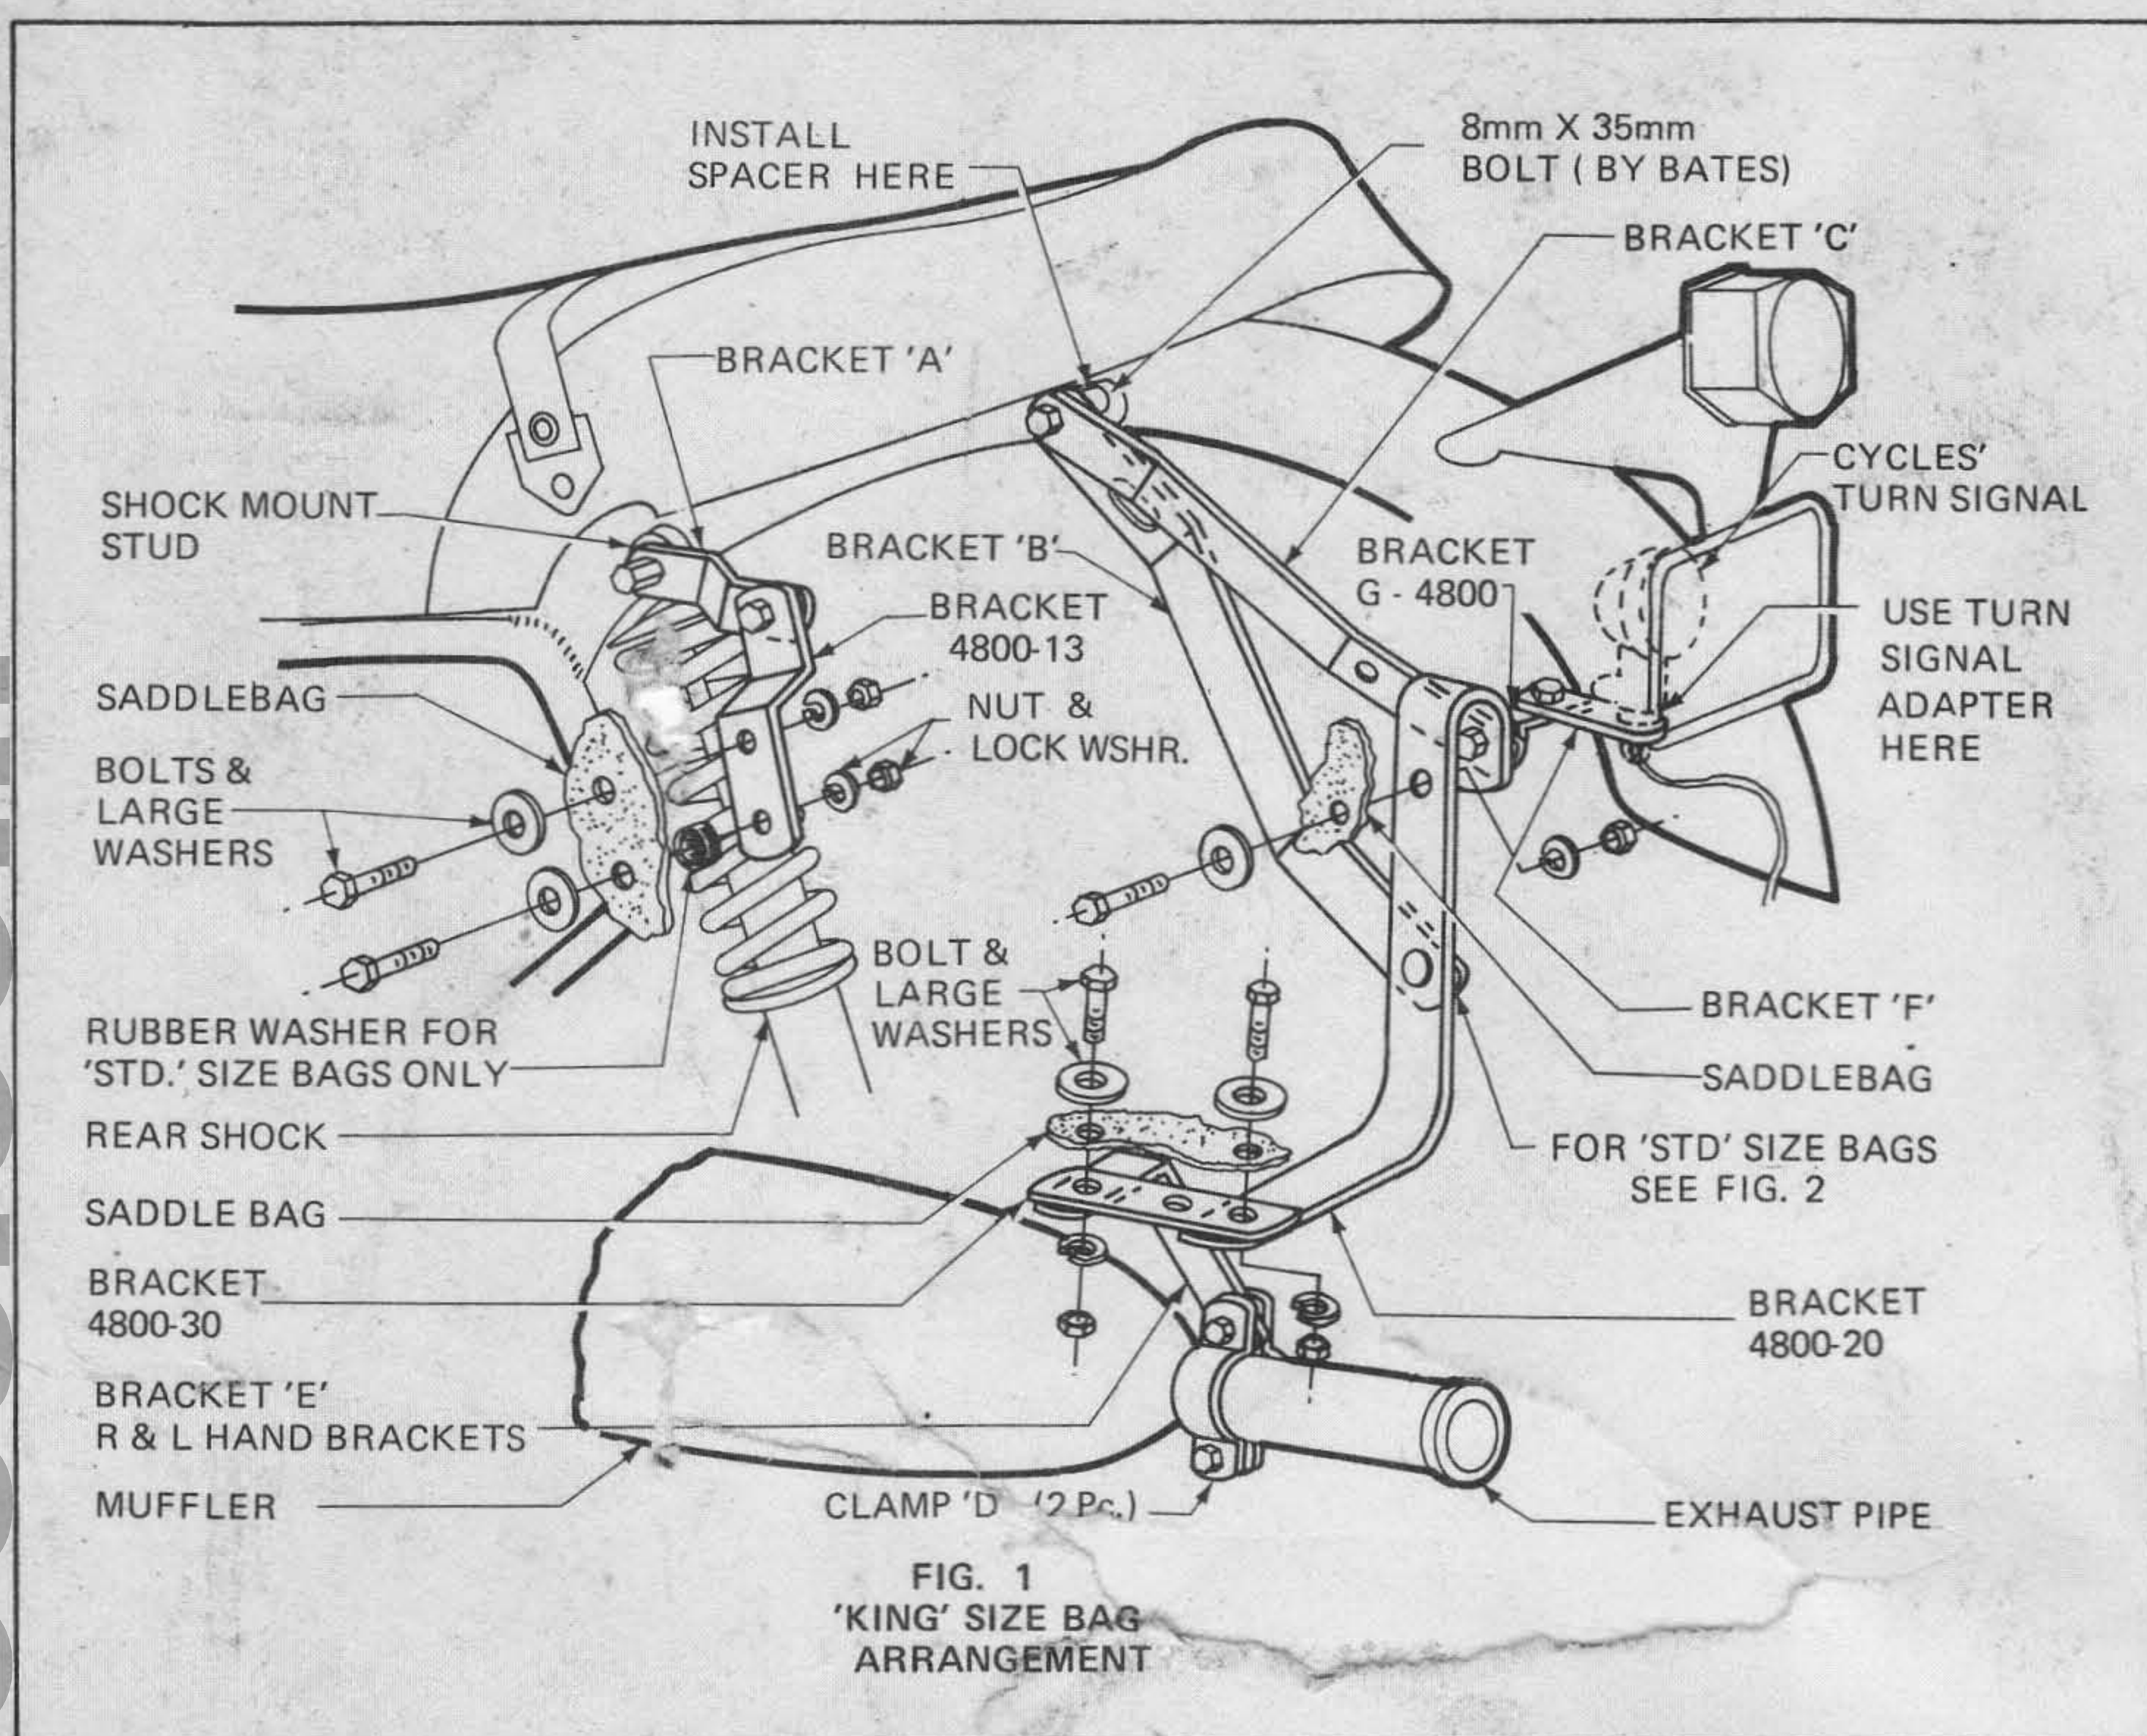

INSTRUCTIONS

1. Remove both turn signals and handrail.
2. Attach bracket 'A' to shock mount—leave bracket 4800-13 attached to bracket 'A'.
3. Attach brackets 'B' and 'C' to handrail mounting stud using the spacer first, then 'B' and then 'C' on the outside. Use the 8mmx35mm bolt furnished. Do not unbolt bracket 4800-20.
4. 'King' size bag mounting is illustrated. For 'Standard' size bags, invert bracket 'B', relocate bracket 4800-20 to other holes in 'B' and 'C'.
5. Attach clamp 'D' and bracket 'E' to exhaust pipe tip as far forward as possible. Note: There is a right and left hand bracket 'E'.
6. To attach bag, mount front of bag to the two holes in bracket 4800-13. Make sure bolts, washers, etc. are used as shown.
7. Bracket 4800-30 attaches under bag and connects brackets 'E' and 4800-20 to bag. Drawing illustrates 'King' size installation. For 'Standard' size bags, use the two holes that are 1½" apart. Install bolts, etc. in sequence shown.
8. Attach bag to 4800-20 at remaining hole in bag.
9. Bates taillight complies with D.O.T. specs for use as turn signal, stoplamp, taillamp or a combination of any two. Black lead is for use as

taillamp, white lead is for turnlamp or stoplamp and green lead is for grounding. Rubber grommet is furnished for passing leads thru bag (drill 11/32" hole). Note: Make sure 'high' filament of lamp (white lead) is not connected to burn continuously.

10. When remounting turn signals, remove original stems and replace with Bates turn signal adapters and lockwasher. Use brackets 'F' and 'G' as illustrated.
11. Carefully level and position bag, then tighten all bolting.
12. To mount Bag Guards, attach to lower bolting in brackets 4800-13 and 4800-20.

CAUTION

Always balance loads evenly and place heavier items to front of saddlebags. Consult owners manual for manufacturers recommendation regarding allowable weights. Improper or over loading may adversely affect handling.

Weights (in lbs.) of Bates Products

Cyclac Bags & Mounts . . . 17	Fiberglass Bags & Mounts. .24
(4110, 4115, 4120, 4125)	(4310, 4315, 4320, 4325)
Bag Guards (4119). 5	Bag Guards (4319). 5%
Bag Guards (4129). 5%	Bag Guards (4329). 6%

BATES INDUSTRIES, INC.
LONG BEACH, CALIFORNIA

BM-31A